





РУКОВОДСТВО  
ПО ЭКСПЛУАТАЦИИ  
Кронштейн для проектора  
**EXi-P4500**

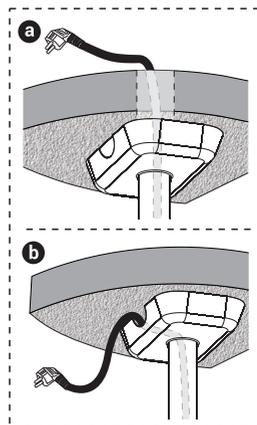

**EXi-P4500**

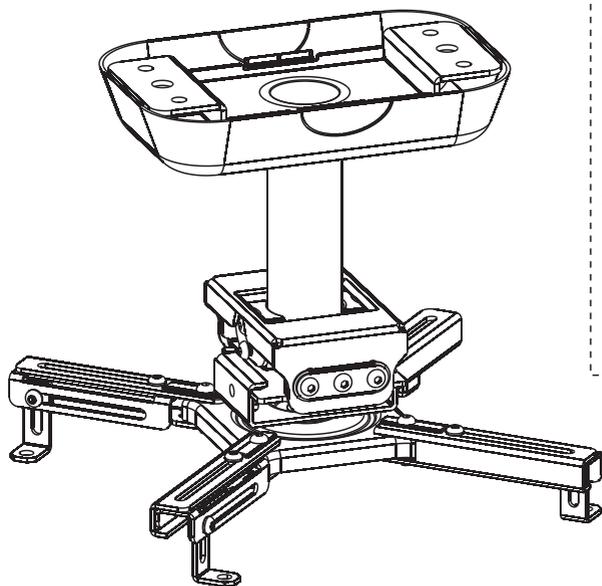



A (x1)



B (x1)



M3x8 (x4)  
M-A



M4x10 (x4)  
M-B



M5x10 (x4)  
M-C



M6x10 (x4)  
M-D



M4x25 (x4)  
M-E



M6x25 (x4)  
M-F



W-A (x4)



W-B (x4)



D3 (x4)  
M-G



D4 (x4)  
M-H



D5 Ø5xØ12 (x4)  
M-I



D6 (x4)  
M-J





M-K (x8)




W-C (x4)





1

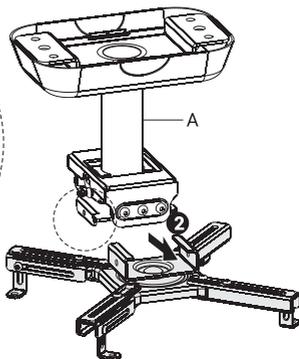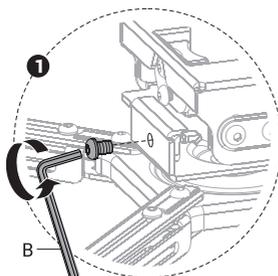





2

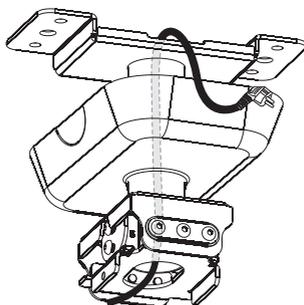




3a

 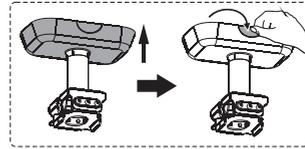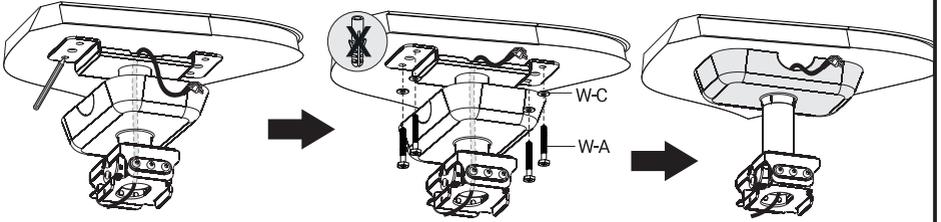 


3b

 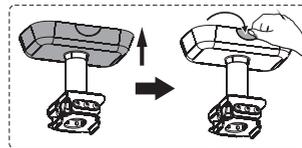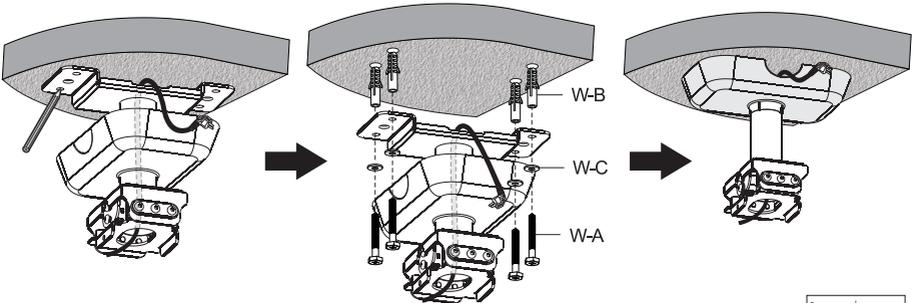 

4

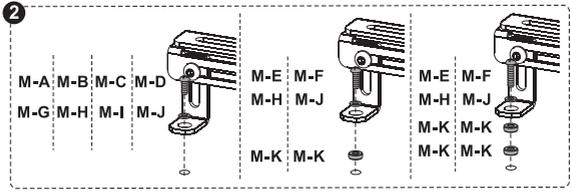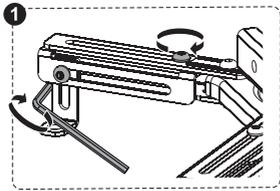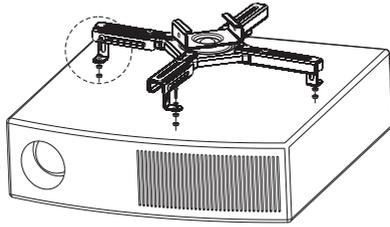

5

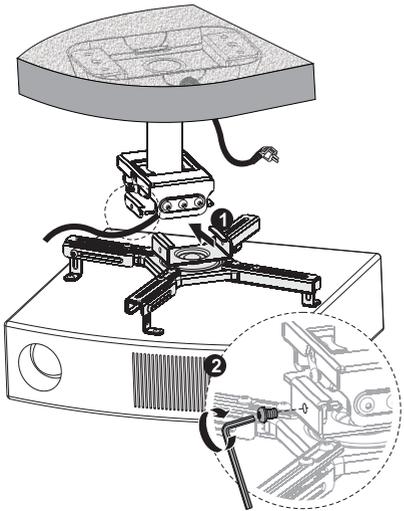

6

